

How to Increase JVM Memory

Goal: Solve out of memory errors by increasing JVM memory in the LANforge GUI.

Increasing Memory in the GUI

1. Open the LANforge GUI.
2. Navigate to the Control → Preferences → JVM and Memory tab.
3. Use the **Minimum Memory** field to adjust the minimum amount of memory allocated to the JVM.

 Important: use caution when adjusting this value. Consult the associated information located on the right of JVM and Memory page, and do not attempt to allocate more than your OS free RAM.