CT523-64-1ac Expandable LANforge WiFIRE 802.11a/b/g/n/ac 1 radio WiFi Traffic Generator Supporting 64 Virtual STA Interfaces

The CT523-64-1 ac has two free slots to add additional /ac or /n radios. Existing STA licenses may be used or additional STA licenses may be purchased (please contact sales for licensing options). The CT523-64-1 ac wireless traffic generator is an excellent choice for testing Access Points and other WiFi networks. The ath10k (a/b/g/n/ac) chipset NICs can support up to 64 stations per radio. __AX_AMT_PER_RAD_TXT__ Each of the Virtual Stations has its own IP address, IP port space, MAC address and routing table. The Virtual Stations can be assigned to communicate to a particular Access Point, use a particular SSID, and Open or WPA/WPA2 authentication assigned. More advanced 802.1X authentication is also included. Each radio can be configured independently of the other. Transmit power and channel/frequency is configured on a per-radio basis. Most other settings are configurable per virtual station.

There are one ath10k a/b/g/n/ac WiFi radios per CT523-64-1ac and multiple LANforge systems can be clustered together for even more realistic radio interference patterns and increased traffic generation capability.

All virtual stations on the same radio must be on the same frequency, but as long as the protocol supports that frequency, the multiple protocols can be used concurrently. For instance, if the radio is configured for a 2.4Ghz channel, the stations can be /b, /g, /n, or /ax. If the radio is on a 5Ghz channel, the stations can be /a, /n, ac, or ax. The bandwidth can be configured for all protocols.

The Virtual Stations may be configured with all of the virtual interfaces on the same subnet, or different subnets, depending on the testing requirements. When used with something like VoIP, it allows all of the VoIP calls to use the standard IP ports (with one call per virtual interface).


The CT523-64-1ac has no fans and is silent. It has 3 antenna. It will fit into a small travel bag or briefcase for easy portability. No additional hardware or software is required, but it is suggested that you manage the system using the LANforge GUI on a separate machine. The CT523-64-1ac can also be managed over a serial console in text mode or through a directly connected monitor, mouse and keyboard.

Performance reports: TCP-DL-30sta-open wave-1 3x3 | TCP-DL-30sta-wpa2 wave-1 3x3



NOTE: This product may have a different hardware configuration than the system pictured above. Refer to your official quote for details.

Example Network Diagram

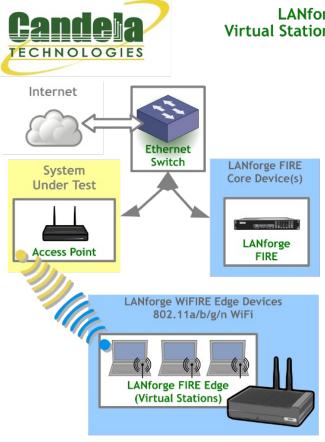

LANforge WiFIRE Virtual Station Traffic Generator

LANforge WiFIRE supports 802.11 Virtual Stations and Access Points*. To the System Under Test, it appears as if there are multiple PCs sitting inside the LANforge system generating independent traffic streams over Wireless NICs.

Many Virtual Station interfaces are supported per LANforge WiFIRE machine. LANforge can send traffic from one physical interface on the local machine to another interface on that same machine. Each physical and virtual interface can be configured on the same, or on different IP subnets.

In the configuration on the left, the LANforge FIRE Core can be one physical Ethernet interface and act as the server. The LANforge FIRE Edge can be the Virtual Station interfaces configured on the WiFi radio. Both interfaces can be on the same machine or multiple LANforge machines can be clustered together for increased traffic generation capacity.

* All system support 802.11 a/b/g/n. Some systems support 802.11ac as well.

Candela Technologies Inc., 2417 Main Street, Suite 201, P.O. Box 3285, Ferndale, WA 98248, USA www.candelatech.com | sales@candelatech.com | +1 360 380 1618

Quick Start Guide

- 1. Connect Management Ethernet port to Management network or management PC. If connecting directly to a PC, an Ethernet cross-over cable should be used.
- 2. Connect eth1 wired Ethernet interface to wired Ethernet interface on the AP or network under test. This usually is considered the 'server' side of the network.
- 3. The Client side of the network will be the Virtual Stations configured on the CT523-64-1ac WiFi NIC(s).
- 4. Connect power to standard US or European AC power source. If using external battery pack, then connect to that instead. Click button to power on the unit.
- 5. The CT523-64-1ac should now boot. If DHCP is enabled on the Management network, the CT523-64-1ac will automatically acquire an IP address. If DHCP is not available, the IP address will be set to **192.168.1.101**.

- 6. Install the LANforge-GUI on a separate management PC or Laptop, or use VNC or remote-desktop programs to access the LANforge system directly. Windows, MAC-OS and Linux GUIs are supported: Select the correct one from the web page served from the LANforge system and install it.
- 7. Start the LANforge-GUI on the management PC and click the 'Discover' button. It should find the CT523-64-1ac appliance and add the IP address to the drop-down box in the Connect widget. Press 'Connect' and you will be connected to the CT523-64-1ac.
- 8. Select the Port Mgr tab in the GUI. Double-click on the device called 'wiphy0'. This is the Radio device, and should be configured for the correct, channel, country-code, etc. Next, select one or more of the Virtual Station interfaces and click 'Modify'. Enter the correct IP address information, SSID and WPA/WPA2 password (if Enabled). After applying these changes, the Virtual Station interface should associate with the AP and be ready to send traffic. You may create up to 64 Virtual Station interfaces per CT523-64-1 ac with the 'Create' button.
- 9. Once the interfaces are configured correctly, you can click on the Layer 3, VOIP/RTP and other LANforge-FIRE related GUI tabs and configure/modify/start/stop particular traffic patterns that utilize the virtual stations and wired Ethernet interface. In most cases, you will want one of the FIRE endpoints to be on the wired interface and the other to be on the WiFi Virtual Station interface. It is also valid to generate traffic between two Virtual Station interfaces. The GUI Chamber View window provides some automated test suites. Contact support if you have suggestions for improvements.
- 10. Any GUI modifications take place immediately after you click 'Submit' or 'OK'.

Candela Technologies Inc., 2417 Main Street, Suite 201, P.O. Box 3285, Ferndale, WA 98248, USA www.candelatech.com | sales@candelatech.com | +1 360 380 1618

LANforge WiFIRE Related Images

Virtual Station Configuration Screen

•	sta2003 (j	jedway1) Configu	re Settings	\odot \sim \times					
Port Status Information Current: LINK-UP GRO Authorized Driver Info: Port Type: WIFI-STA Parent: wiphy0 wiphy0									
		Port Configurabl	es						
Standard Configuration	Advanced C	configuration Misc	Configuration (Corruptions Custom WiFi					
Enable —— Set IF Down	Down	General Interface Settings							
Set MAC	DHCP-IPv6	DHCP Release	DHCP Vendor ID:	None					
Set TX Q Len	☑ DHCP-IPv4	Secondary-IPs	DHCP Client ID:	None					
Set MTU	DNS Servers:	BLANK	Peer IP:	NA					
Set PROMISC	IP Address:	0.0.0.0	Global IPv6:	AUTO					
Services —	IP Mask:	0.0.0.0	Link IPv6:	AUTO					
HTTP	Gateway IP:	0.0.0.0	IPv6 GW:	AUTO					
FTP	Alias:		MTU:	1500					
RADIUS	MAC Addr:	04:f0:21:5e:2a:ab	TX Q Len	1000					
Low Level	Rpt Timer:	fast (3 s) 🔻	WiFi Bridge:	NONE					
PROMISC		WiF	i Settings						
TSO Enabled	SSID: je	dway2-wpa2-2000	AP: DEF.	AULT					
UFO Enabled	Key/Phrase: jec	dway2-wpa2-2000	Mode: 802	.llabqn-AC 💌					
GS0 Enabled	Freq/Channel: 5	5260/52	Rate: OS [Default 💌					
LRO Enabled	WPA WPA	A2 OSEN WEP							
GRO Enabled	Disable HT4	0 🗌 Enable VHT160	Disable SGI						
Print Display	Probe	Display Sca <u>n</u>	iync <u>A</u> p	ply <u>O</u> K <u>C</u> ancel					

Candela Technologies Inc., 2417 Main Street, Suite 201, P.O. Box 3285, Ferndale, WA 98248, USA www.candelatech.com | sales@candelatech.com | +1 360 380 1618

Layer 3 (Ethernet, UDP, TCP) Connections

<u></u>				LA	Nforge Manager	Version(5.2.1	3)				↑ □ ×
Control Repo	orting <u>T</u> ea	r-Off Info	Plugins								
						Stop All	R	estart Manag	er	Refres	h HELP
Attenuators	File-IO	Laver-4	Test Mgr	Test Group	Resource Mar E	vent Log Alerts	Port Mgr	Messages			
Attenuators	Status	Layer-4	restingi	Laver-3	Resource Mgr E	L3 End		Messages		WanLinks	
	Status			Layers		ES End				wanteniko	-
	Rpt Timer:	fast	(1 s) 🔻	Go Test Mar	nager all	 Select 	All Star	t Stop	Quiesce	Clear	
										Delete	
	View	0 - 200			Go	L	Display	Cr <u>e</u> ate	lodify	Delete	
					Cross Connects for	Selected Test Mar	nager —	2			
Name	Туре	State	Pkt Rx A → B	Pkt Rx A ← B	Rate A → B	Rate A ← B	Rx Drop % A	Rx Drop % B	Drop Pkts A	Drop Pkts B	Avg RTT
xcdx-1	LF/UDP	Run	17.294	17,549	9.998.239	9,997,437	0	0	0	0	1
xcdx-10	LF/UDP		17,377	17,716	9,997,632	9,996,340	0	0	0	0	0
xcdx-2	LF/UDP	Run	17,548	17,802	9,997,351	9,996,964	0	0	0	0	0
xcdx-3	LF/UDP		17,633	17,802	9,997,891	9,996,964	0	0	0	0	0
xcdx-4	LF/UDP		17,633		9,997,891	9,996,964	0	0	0	0	1 =
xcdx-5	LF/UDP		17,718		9,997,947	9,992,326	0	0	0	0	1
xcdx-6	LF/UDP		17,718		9,997,947	9,997,018		0	0	0	1
xcdx-7	LF/UDP		17,718		9,997,947	9,997,018		0	0	0	1
xcdx-8	LF/UDP		17,718	17,044	9,997,947	9,997,516	0	0	0	0	1 🗸
I			017.710	17.044		0.007.010					•
Logged in to:	192.168.1	00.26:40	02 as: Admin	1							

Layer 3 Create/Modify Screen

<u></u>			udp-se - Crea	ite/Mo	dify Cross Co	nnect							
+ - All					Display	Syno	с	Batch-Create	1	Apply	ОК	Cancel	
6	Cross-Connect				9		Cr	oss-Connect					
CX Name:	udp-se		-	Report Timer: default (5 s)							-		
CX Type:	LANforge / UDP					Endpoint A			Endpoint B				
	Endpoint A Endpoint B				Pld Patte	Pld Pattern increasing			-				
Resource:	1 (brent-6port)	-	1 (brent-6port)	-	Min IP Po	In IP Port: AUTO		-	AUTO		-		
Port:	1 (eth0)	-	2 (eth1)	-	Max IP Po	rt:	Same		-	Same		•	
Min Tx Rate:	New Modem (56 Kbps)	-	New Modem (56 Kbps)	-		In Duration: Forever		-	- Forever				
Max Tx Rate:	Same	-	Same	-		Max Duration:		Same					
Min PDU Size:	AUTO	-	AUTO	-		Min Reconn:		0 (0 ms)		▼ 0 (0 ms)		•	
Max PDU Size:	Same	-	Same	-			F						
IP ToS:	Best Effort (0)	-	Best Effort (0)	-		Max Reconn:						•	
Pkts To Send:	Infinite	-	Infinite	-	Multi-Cor	in:	Nor	Normal (0)					
							Script Script						
							Thresholds			Thresholds			
0	Cross-Connect				M		End	dpoint A		Endpoin	tВ		
Test Manager	default_tm			-	Snd Buff	Size:	-	Default	-	OS Defau		-	
Quiesce:	3 (3 sec)				Rcv Buff S	ize:	0S	Default	-	OS Defau	lt	-	
	Endpoint A E		Endpoint B		Send Bad FCS		zer	zero (0%) 🔻		zero (0%)		-	
IP Addr:	AUTO	-	AUTO	-	Src MAC:		00:	00:00:00:00:00	-	00:00:00): 00: 00: 0	• 00	
	Replay File		Replay File					Use-Proxy		Use-Proxy			
	Loop		Loop			ir:							
	🗹 Dest Mac		☑ Dest Mac		Proxy Por	t:	0			0			
Filename:					Socket P		. 0		-	0			
Dest MAC:	<custom></custom>	-	<custom></custom>	-	JUCKEL	ionicy		Payload			Payload		
								Payload			Payload		
B	Endpoint A		Endpoint B		I	Er		Endpoint A		Endpoint B			
Conn Timeout:	10s (10 s)	-	10s (10 s)	-			D	Checksum		Do Che	cksum		
										UnMan	aged		
TCP MSS:	OS Default	-	OS Default				D	uration Quiesce		Duratio	n Quies	ce	
							Q	uiesce-After-Range		Quiesco	e-After-F	lange	
								P_NODELAY		TCP_NO			
						C	Co	oncurrent IP Addrs	C	Concur	rent IP A	lddrs	
								ear-Port-On-Start		Clear-P	ort-On-	start	
						Li	near-IP-Ports		Linear-	IP-Ports			
					Endp Name	e: [udp-	se-A		udp-se-B			
						1							

Software Features

- 1. Supports real-world protocols:
 - 1. Layer 2: Raw-Ethernet.
 - 2. 802.1Q VLANs.
 - 3. PPPoE: Integrated PPPoE support.

- 4. Layer 3: IPv4, IPv6, UDP/IP, IGMP Multicast UDP, TCP/IP.
- 5. Layer 4-7: FTP, HTTP, HTTPS, TFTP, SFTP, SCP
- 6. 802.11a/b/g/n Wireless Station (up to 0 per machine).
- 7. 802.11a/b/g/n/ac Wireless Station (up to 64 per machine).
- 8. Layer 4-7: TELNET, PING, DNS, SMTP, NMAP (via add-on script).
- 9. File-IO: NFSv3, NFSv4, CIFS, iSCSI.
- 2. Supports up to 1000 concurrent TCP connections with base license package.
- 3. The CT523-64-1ac is able to push around 900+Mbps the 802.11AC wave-1 radio, depending on the protocols mix, wireless mode and environment, and speed of the network under test. Supports at least 60 VoIP (SIP, RTP) calls if appropriate licenses are purchased. (

```
Performance results: TCP-DL-30sta-open wave-1 3x3 | TCP-DL-30sta-wpa2 wave-1 3x3 )
```

- 4. Supports real-world compliance with ARP protocol.
- 5. Supports ToS (QoS) settings for TCP/IP and UDP/IP connections.
- 6. Uses publicly available Linux and Windows network stacks for increased standards compliance.
- 7. Utilizes libcurl for FTP, HTTP and HTTPS (SSL), TFTP and SCP protocols.
- 8. Supports file system test endpoints (NFS, CIFS, and iSCSI file systems, too!). File system mounts can use the virtual interface feature for advanced testing of file server applications.
- 9. Supports custom command-line programs, such as telnet, SMTP, and ping.
- 10. Comprehensive traffic reports include: Packet Transmit Rate, Packet Receive Rate, Packet Drop %, Transmit Bytes, Receive Bytes, Latency, Jitter, various Ethernet driver level counters, and much more.
- 11. Supports generation of reports that are ready to be imported into your favorite spread-sheet.
- 12. Allows packet sniffing and network protocol decoding with the integrated Wireshark protocol sniffer.
- 13. GUI runs as Java application on Linux, MAC and Microsoft Operating Systems (among others).
- 14. GUI can run remotely, even over low-bandwidth links to accommodate the needs of the users.
- 15. Central management application can manage multiple units, tests, and testers simultaneously.
- 16. Includes easy built-in scripting for iterating through rates and packet sizes, with automated reporting. Also supports scriptable command line interface (telnet) which can be used to automate test scenarios. Perl libraries and example scripts are provided!
- 17. Automatic discovery of LANforge data generators simplifies configuration of LANforge test equipment.
- 18. LANforge traffic generation/management software is supported on Linux and MS Windows.

Candela Technologies Inc., 2417 Main Street, Suite 201, P.O. Box 3285, Ferndale, WA 98248, USA www.candelatech.com | sales@candelatech.com | +1 360 380 1618

Hardware Specification

- 1. High-End Appliance with no fans.
- 2. Operating System: Fedora Linux with customized 64-bit Linux kernel.
- 3. Two 1Gbps Ethernet ports, room for three wifi NICs, 2/4/6 port 1G or 10G Ethernet

- 4. Two Atheros/Qualcomm 802.11a/b/g/n/ac 3x3 MIMO and 1 Atheros/Qualcomm 802.11a/b/g/n 3x3 MIMO NIC with three external antenna each. Supports up to 64 virtual stations (200 per a/b/g/n radio and 64 per a/b/g/n/ac radio).
- 5. Antenna-to-Radio association: See labels on chassis.
- 6. Intel i7-4700EQ 2.4 GHz processor.
- 7. DB9 Serial console (115200 8 N 1) for console management & initial configuration.
- 8. VGA/DVI-D, USB ports for desktop usage.
- 9. 8 GB RAM.
- 10. 40+ GB Solid State Hard Drive.
- 11. Larger storage drives available.
- 12. 9-30v 4AMP external power supply (brick).
- 13. Weight: 8 lbs
- 14. Dimensions: 11 x 8 x 3 inches Metric: 277 x 195 x 78 mm.
- 15. Operating Temperature: -20 ~ 45°C.
- 16. Certification: CE Emission, FCC Class A, RoHS

Additional Feature Upgrades

Unless otherwise noted in the product description, these features usually cost extra:

- WanPaths (LANforge-ICE feature set)
- Virtual Interfaces: MAC-VLANs, 802.1Q VLANs, WiFi stations, etc
- FIRE Connections: Base FIRE license includes 1000 active connections.
- WiFi RF Attenuator: Adjust WiFi signal strength in a controllable manner.
- RF Noise generator: Generate modulated WiFi RF noise.
- RF Noise / Radar Simulator: Simulate RADAR pulses and other non-modulated RF noise.
- SMA RF Cable Bundle: Used to cable LANforge WiFIRE radios to device-under-test.
- LANforge-ICE Network Emulation.
- VOIP: Each concurrent call over the included package requires a license.
- VolP-Mobile Audio Quality Testing using POLQA/PESQ.
- Mobile-Mobile Audio Quality Testing using POLQA/PESQ.
- Armageddon: Each pair of ports requires a license if not already included.
- RF Chambers for WiFi testing.
- External battery pack: 12+ hours for CT520, CT523, CT92X and other platforms.

Last modified: Fri Apr 12 15:32:55 PDT 2024

Candela Technologies Inc., 2417 Main Street, Suite 201, P.O. Box 3285, Ferndale, WA 98248, USA www.candelatech.com | sales@candelatech.com | +1 360 380 1618